

SS2P

Ballast Type: Electromagnetic
 Input Voltage: 120VAC+5%,-10%
 Input Frequency: 60 Hz.

Starting Method: Preheat Self Start
 Lamp Connection: Series
 Unit Color: White

Unit Weight: 0.8 lb.
 Carton Quantity: 60
 Skid Quantity: 1920

ELECTRICAL SPECIFICATION:

Line Voltage (V)	Lamp Type	Lamp Watts	No. of Lamps	Line Current (A)	Input Power (W)	Power Factor	Max Current THD (%)	Current Crest Factor	Ballast Factor	Wiring Diagram	B.E.F.
120	F20T12	20	1	0.29	20	≥0.57	≤10	≤1.6	0.77	006	3.85
120	F15T12	15	1	0.33	20	≥0.51	≤12	≤1.6	1.00	006	5.00
120	F14T12	14	1	0.35	20	≥0.47	≤15	≤1.6	0.92	006	4.63
120	F15T8	15	1	0.31	19	≥0.50	≤10	≤1.6	1.02	006	5.37
120	F14T8	14	1	0.33	19	≥0.49	≤15	≤1.6	0.88	006	4.63

PERFORMANCE:

- Electromagnetic reactor type ballast
- Preheat self start
- Series operation
- Normal power factor
- Encased & potted
- Sound rated A
- Meets ANSI C82.1


APPLICATION:

- Maximum case temperature: 194°F/90°C
- Maximum ambient temperature: 104°F/40°C
- Minimum starting temperature: 50°F/10°C
- Remote mounting: 10ft.


SAFETY:

- UL/935 (Class P, Type 1 outdoor) listed
- CSA/C22.2 certified
- Automatic reset thermal protector
- No PCB's
- RoHS Compliant

STYLE:

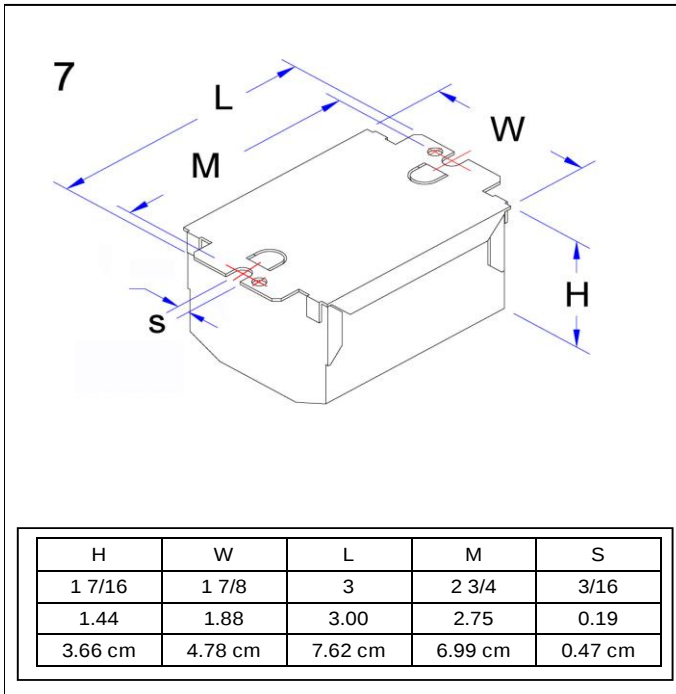

WIRING DIAGRAM:

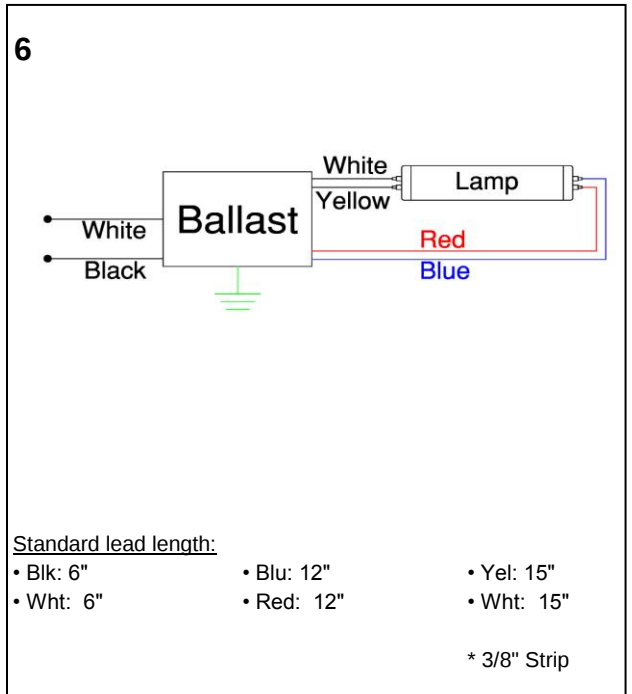

WARRANTY

Robertson Worldwide warrants to the purchaser that this ballast will be free from defects in material or workmanship for a period of 2 years from date of manufacture when properly installed and under normal conditions of use. For more information on Robertson Worldwide's ballasts, call 1-800-323-5633 or visit www.robertsonww.com. Specifications subject to change without notice.

Revised 12/17/10

ROBERTSON WORLDWIDE

13611 Thornton Rd, Blue Island, IL 60406, TEL: 1-800-323-5633, FAX: 1-877-388-2420, www.robertsonww.com