




RC-4S60-TP

Brand Name	MAGNETIC STD
Ballast Type	Magnetic
Starting Method	Rapid Start
Lamp Connection	Series
Input Voltage	120
Input Frequency	60 HZ
Status	Active

Electrical Specifications

Lamp Type	Num. of Lamps	Rated Lamp Watts	Min. Start Temp (°F/C)	Input Current (Amps)	Input Power (Watts)	Ballast Factor	MAX THD %	Power Factor	Lamp Current Crest Factor	B.E.F.
* F24T12/HO	3	35	-20/-29	1.60	148	0.94	40	0.77	2.0	0.64
F24T12/HO	4	35	-20/-29	1.80	183	1.00	30	0.85	1.9	0.55
F36T12/HO	3	50	-20/-29	1.60	166	0.93	30	0.86	1.9	0.56
F36T12/HO	4	50	-20/-29	1.90	212	0.98	20	0.93	1.9	0.46
F48T12/HO	3	60	-20/-29	1.90	217	0.92	20	0.95	1.8	0.42
F48T12/HO	4	60	-20/-29	2.40	288	0.92	15	1.00	1.7	0.32
F72T12/HO	3	85	-20/-29	2.40	291	0.90	15	1.01	1.7	0.31

Wiring Diagram

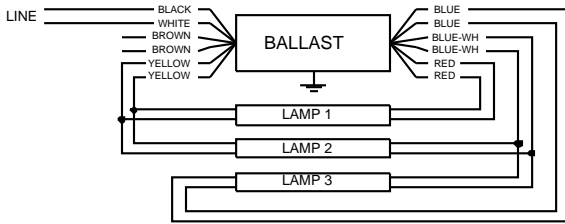

Note: Insulate unused leads individually as shown on ballast label


Diag. 8

The wiring diagram that appears above is for the lamp type denoted by the asterisk (*)

Standard Lead Length (inches)

	in.	cm.		in.	cm.
Black	24	61	Yellow/Blue		0
White	24	61	Blue/White	46	116.8
Blue	46	116.8	Brown	46	116.8
Red	46	116.8	Orange		0
Yellow	46	116.8	Orange/Black		0
Gray	0		Black/White		0
Violet		0	Red/White		0

Enclosure

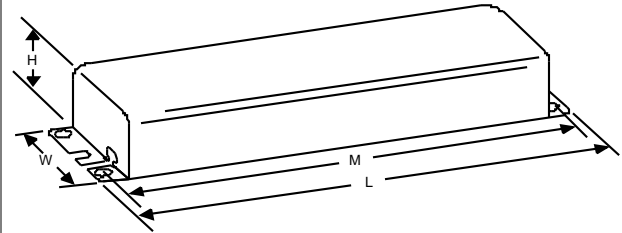

CASE "R"

Enclosure Dimensions

OverAll (L)	Width (W)	Height (H)	Mounting (M)
11.75 "	3.1875 "	2.625 "	11.14062 "
11 3/4	3 3/16	2 5/8	11 9/64
29.8 cm	8.1 cm	6.7 cm	28.3 cm

Revised 07/01/1999



Data is based upon tests performed by Advance Transformer in a controlled environment and representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

ADVANCE TRANSFORMER CO.

O'HARE INTERNATIONAL CENTER · 10275 WEST HIGGINS ROAD · ROSEMONT, IL 60018

Customer Support/Technical Service: Phone: 800-372-3331 · Fax: 630-307-3071

Corporate Offices: Phone: 800-322-2086