




Electrical Specifications

VC-2E75-S-TP	
Brand Name	MAGNETIC STD
Ballast Type	Magnetic
Starting Method	Instant Start
Lamp Connection	Series
Input Voltage	277
Input Frequency	60 HZ
Status	Active

Lamp Type	Num. of Lamps	Rated Lamp Watts	Min. Start Temp (°F/C)	Input Current (Amps)	Input Power (Watts)	Ballast Factor	MAX THD %	Power Factor	Lamp Current Crest Factor	B.E.F.
* F60T12	2	50	0/-18	0.47	118	0.93	30	0.91	1.9	0.79
F64T12	2	52	0/-18	0.47	120	0.93	30	0.92	1.9	0.78
F72T12	2	57	0/-18	0.51	132	0.94	25	0.93	1.8	0.71
F84T12	2	70	0/-18	0.57	151	0.94	25	0.96	1.8	0.62
F96T12	2	75	0/-18	0.60	165	0.94	25	1.00	1.7	0.57

Wiring Diagram

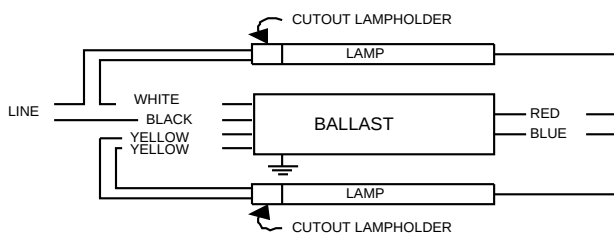


Diag. 36

The wiring diagram that appears above is for the lamp type denoted by the asterisk (*)

Standard Lead Length (inches)

	in.	cm.		in.	cm.
Black	41	104.1	Yellow/Blue		0
White	41	104.1	Blue/White		0
Blue	23	58.4	Brown		0
Red	23	58.4	Orange		0
Yellow		0	Orange/Black		0
Gray	0		Black/White		0
Violet		0	Red/White		0

Enclosure

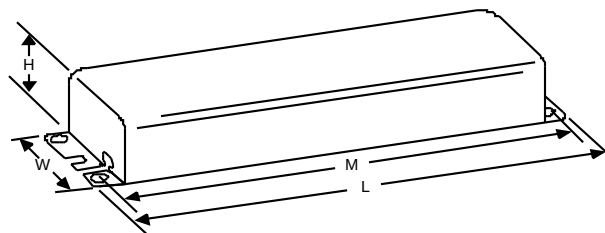

CASE "R"

Enclosure Dimensions

OverAll (L)	Width (W)	Height (H)	Mounting (M)
11.75 "	3.109375 "	1.78125 "	11.14062 "
11 3/4	3 7/64	1 25/32	11 9/64
29.8 cm	7.9 cm	4.5 cm	28.3 cm

Revised 09/06/2002



Data is based upon tests performed by Advance Transformer in a controlled environment and representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

ADVANCE TRANSFORMER CO.

O'HARE INTERNATIONAL CENTER · 10275 WEST HIGGINS ROAD · ROSEMONT, IL 60018

Customer Support/Technical Service: Phone: 800-372-3331 · Fax: 630-307-3071

Corporate Offices: Phone: 800-322-2086