Features

- Converts DMX Signal to 0/1-10V Dimming Signal
- Complies with both DMX RDM and Traditional DMX Networks
- Use Driver Dim-to-Off Capability to Eliminate AC Switch or Relay
- Powered by driver 12Vdc Vaux with Simple 3-Wire Connection to Driver
- 0~10V or 1~10V selectable (0~10V Default)
- Linear dimming curve or logarithmic dimming curve selectable (Default linear dimming curve)
- At Power on, the signal output is settable before DMX Signal is Received (Default remaining at 0V)
- In the Event of DMX Signal Loss, the signal output is settable (Default no changing to output)
- In operation, the duration of DMX signal loss judgement is settable (60s default)
- The maximum output dimming level and minimum output dimming level can be user-defined
- IP66/IP67 and UL Dry/Damp/Wet Location






Description

The CNV-DMXR2 is a DMX RDM to 0/1-10V converter that enables one or more Inventronics Controls-Ready drivers to be controlled by a DMX system. The CNV-DMXR2 is compatible with LED drivers with dim-to-off capability, 12Vdc/250mA auxiliary power supply and 0/1-10V dimming input.

The CNV-DMXR2 is DMX RDM compatible. DMX RDM (Remote Device Management) permits intelligent bidirectional communication between devices from multiple manufacturers utilizing a modified DMX512 data link. This allows the DMX RDM compatible device to be addressed and configured remotely, using a compatible DMX RDM master. DMX RDM devices are inherently compatible with standard DMX networks.

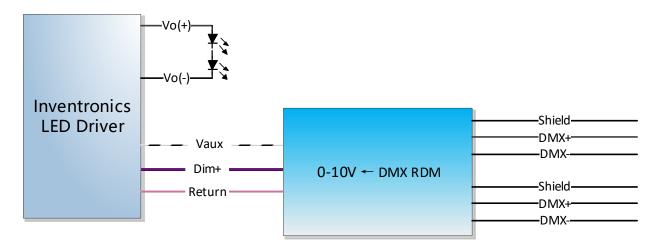

Models

P/N	Connection to LED Driver	Connection to DMX System	
CNV-DMXR2	UL Wire(black/white, purple, pink)	UL Wire(black/white, purple, pink)	

1/9

Fax: 86-571-86601139

Specifications are subject to changes without notice.

All specifications are typical at 25°C unless otherwise stated.

Input Specifications


put opositionis						
Parameter	Min.	Тур.	Max.	Notes		
Vaux Voltage 10.8 V 12 V 13.2 V Support the maximum output LED driver to 100%lo		Support the maximum output current of LED driver to 100%lo				
laux (Vaux Current) - 30 mA 50 mA 200mA peak current wh 30mA for steady state		200mA peak current when transmitting, 30mA for steady state				
DMX+ to DMX-	-6 V	-	6 V			
DMX+ to Chassis	22M ohm	-	-			
DMX- to Chassis	22M ohm	-	-			
Logic 0 Input	-	-	-0.2 V	DMX+ to DMX-		
Logic 1 Input	0.2 V	-	-	DMX+ to DMX-		


Dimming Specifications

Parameter	Min.	Тур.	Max.	Notes
Direct Vallage	0 V	-	10 V	Vaux>12.5V
Dim+ Voltage	0 V	-	(Vaux-2.5)V	Vaux≤12.5V
Dim+ Sink Current	0 mA	-	5 mA	-


Output Dimming Curve

• 0~10V dimming curve

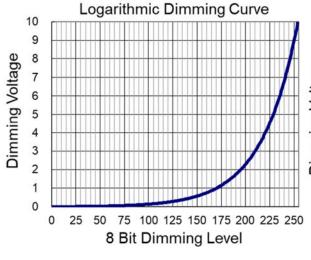

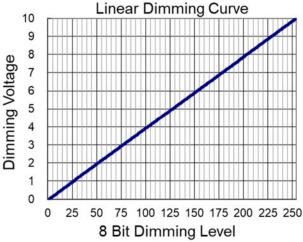


● 1~10V dimming curve

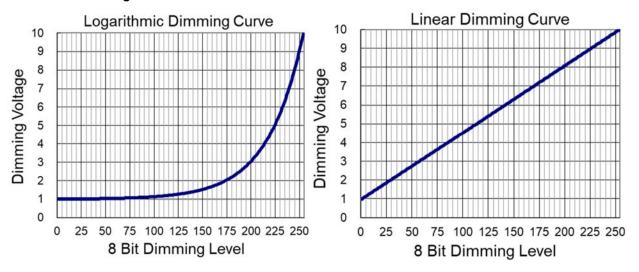


For each kind of curve, the user can modify it as follows by the **CNV-DMXR2 Tool** .

Modify the active dimming level range

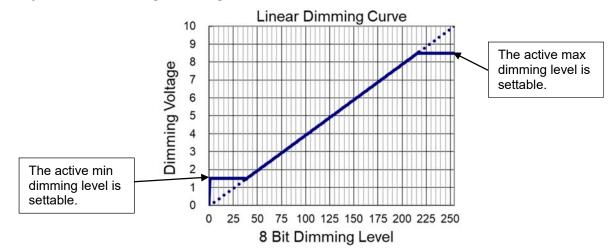

Modify the physical min value

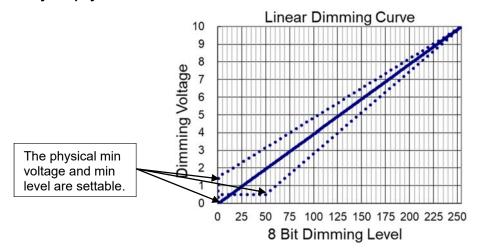

Note: (1) The logarithmic dimming curve can be modified in the same way.

(2) The default factory curve is the 0~10V linear dimming curve.

General Specifications

Parameter	Тур.	Max.	Notes		
Dimensions Inches (L × W × H) Millimeters (L × W × H)	2.72 × 1.50 × 1.06 69 × 38 × 27			With mounting ear 3.54 × 1.50 × 1.06 90 × 38 × 27	
Net Weight	-	158 g	-		

Environmental Specifications

Parameter	Min.	Тур.	Max.	Notes	
Operating Temperature	-40 °C	-	+70 °C		
Storage Temperature	-40 °C	-	+85 °C	Humidity: 5% RH to 95% RH	

Safety & EMC Compliance

Safety Category	Standard
UL/CUL	UL 8750, CAN/CSA-C22.2 No. 250.13
CE	EN 61347-1, EN61347-2-13
СВ	IEC 61347-1 IEC 61347-2-11
EMI ⁽¹⁾ Standards	Notes
EN IEC 55015 ⁽²⁾	Conducted emission Test & Radiated emission Test
EN IEC 61000-3-2	Harmonic current emissions

4/9

Specifications are subject to changes without notice.

All specifications are typical at 25 $^{\circ}\text{C}$ unless otherwise stated.



DMX RDM to 0/1-10V Converter

Safety & EMC Compliance (Continued)

EMI ⁽¹⁾ Standards	Notes
	ANSI C63.4 Class B
FCC Part 15 ⁽²⁾	This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: [1] this device may not cause harmful interference, and [2] this device must accept any interference received, including interference that may cause undesired operation.
EMS ⁽¹⁾ Standards	Notes
EN 61547	Electromagnetic Immunity Requirements Applies To Lighting Equipment

Notes: (1) The EMI and EMS test results are tested with Inventronics LED drivers.

(2) The CNV-DMXR2 is considered as a component that will be operated in combination with final equipment. Since EMI performance will be affected by the complete installation, the final equipment manufacturers must re-qualify EMI Directive on the complete installation again.

Function Definition of Interface(Connection to LED Driver)

Wire Color	Function	Notes	
BLACK/WHITE	Vaux	To LED driver's auxiliary power	
PURPLE	Dim+	Output to driver's 0/1-10V dimming line	
PINK	Return	Return for auxiliary power and dimming signal	
PURPLE	DMX+	To DMX Console	
PINK	DMX-	To DMX Console	
BLACK/WHITE	Shield	Connect with DMX shield	

Tel: 86-571-56565800


CNV-DMXR2

Rev.A

Operation Notes

Wiring

DMX-RDM daisy chain connection see the diagram below:

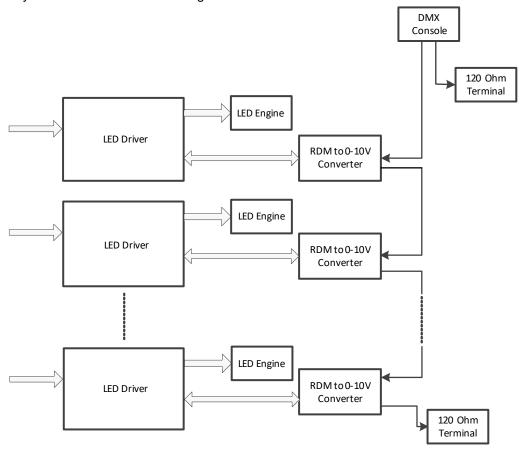

- Up to 32 converters may be daisy-chained, terminated by a 120-ohm resistor (connected between DMX+ & DMX- at the last converter).
- 100m maximum distance between converters.
- For best performance, a characteristic impedance of 120 ohms should be maintained for the entire length of the control line.

Fax: 86-571-86601139

Inventronics-defined RDM Instructs (Manufacturer-Specific PIDs)

Manufacturer-Specific PIDs Defines						
~	SET	RDM Parameter ID's (Slot 21-22)	Value			
	Allowed	Category – Set Only	0x800x			
	√	RESET_CONVERTER_SETTINGS	0x8000			
	√	SET_OUTPUT_RANGE_TO_0-10V	0x8001			
	√	SET_OUTPUT_RANGE_TO_1-10V	0x8002			
	√	SET_OUTPUT_CURVE_TO_LINEAR	0x8003			
	√	SET_OUTPUT_CURVE_TO_LOGARITHMIC	0x8004			
	√	SET_POWER_ON_LEVEL_ENABLE	0x8005			
	√	SET_POWER_ON_LEVEL_DISABLE	0x8006			
	√	SET_LOSS_OF_DATA_LEVEL_ENABLE	0x8007			
	√	SET_LOSS_OF_DATA_LEVEL_DISABLE	0x8008			
GET Allowed	SET Allowed	Category – Set & Get	0x801x			
√	√	CNV_PHYSICAL_MIN_OUTPUT_VOLTAGE	0x8010			
√	√	CNV_PHYSICAL_MIN_OUTPUT_LEVEL	0x8011			
V	√	CNV_ACTIVE_MIN_OUTPUT_LEVEL	0x8012			
V	√	CNV_ACTIVE_MAX_OUTPUT_LEVEL	0x8013			
$\sqrt{}$	√	CNV_POWER_ON_LEVEL	0x8014			
\checkmark	√	CNV_LOSS_OF_DATA_LEVEL	0x8015			
$\sqrt{}$	V	CNV_LOSS_OF_DATA_TOLERANCE_TIME	0x8016			

Loss of DMX-RDM signal

- If the DMX-RDM signal loses, the CNV-DMXR2 will remain 0~10V dimming output until DMX-RDM signal is received (Default).
- Activate the function of signal loss dimming level via user-defined RDM instructs or CNV-DMXR2 Tool.
- Enable to set the signal loss dimming level via user-defined RDM instructs or CNV-DMXR2 Tool.
- Enable to set the duration of signal loss judgement via user-defined RDM instructs or CNV-DMXR2 Tool.

Note: Signal loss dimming level means when the DMX-RDM signal is judged to be lost, the CNV-DMXR2 can output a certain dimming level, that the level is settable

Power on

- At power on, the CNV-DMXR2 keeps 0V output until DMX512 signal is received (Default).
- Activate the function of power on dimming level via user-defined RDM instructs or CNV-DMXR2 Tool.
- Enable to set the power on dimming level via user-defined RDM instructs or CNV-DMXR2 Tool.

Note: When the function of signal loss dimming level is activated, if no DMX-RDM signal is received for a long time after powering on, and the time same as the duration of signal loss judgement, the output of CNV-DMXR2 will change to signal loss dimming level.

7/9

Fax: 86-571-86601139

Specifications are subject to changes without notice.

All specifications are typical at 25°C unless otherwise stated.

Rev.A

CNV-DMXR2

Maximum and minimum dimming level

- Enable to set the maximum and minimum dimming level via user-defined RDM instructs or CNV-DMXR2 Tool.
- Effective value range: 1≤minimum level≤maximum level≤254.
- The output of >0 dimming level of DMX512 is restricted by the maximum and minimum dimming level.

Addressability

The CNV-DMXR2 can be addressed in two different ways.

- If the converter is being used in a DMX RDM environment, the easiest way to address the CNV-DMXR2 is addressing and configuring via the RDM protocol.
- If you are using the CNV-DMXR2 in a traditional DMX environment, the address may be set using the Inventronics CNV-DMXR2 Tool Software. Please contact Inventronics for any questions regarding this process.


Software Interface and User Manual Download

- To download the CNV-DMXR2 software interface, please click here: <u>CNV-DMXR2 Tool</u>.
- More operation details please click here to see the: CNV-DMXR2 Tool User Manual.

Compatible Driver List

• Compatible driver list please refer to the: <u>CNV-DMXR2 Compatible List</u>.

Mechanical Outline

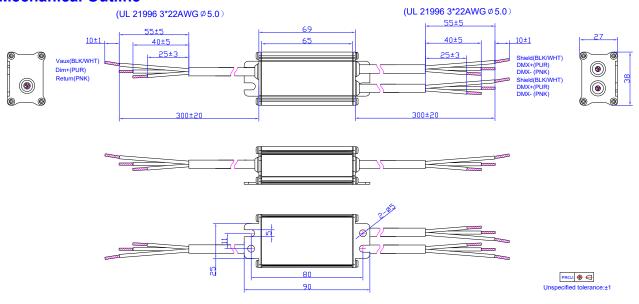

RoHS Compliance

Our products comply with reference to RoHS Directive (EU) 2015/863 amending 2011/65/EU, calling for the elimination of lead and other hazardous substances from electronic products.

8/9

Fax: 86-571-86601139



DMX RDM to 0/1-10V Converter

Revision History

Change Date	Rev.	Description of Change			
Date Rev.		Item	From	То	
2023-08-10	Α	Datasheet Release			