


FRANCE

P5KA2NG-2E Series



**NO Transformer Box
Required for
Interior Installations!**

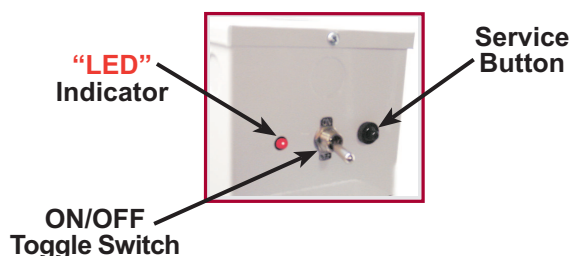

“ENFORMER”



- ◆ **Diagnostic Circuit- “LED”** indicates the reason for service, allowing for quick, easy troubleshooting.
- ◆ **Primary Wiring Requirements of a Non-SCGFP** - with the added safety of Secondary Ground Fault Protection.
- ◆ **Service Switch** - For easy troubleshooting of ground faults and primary wiring problems. Overrides the SCGFP for up to 30 minutes.
- ◆ **Auto Reset** - After secondary ground fault, automatically attempts to reset three times within ten seconds. Manual reset possible at any time by disconnecting primary power.
- ◆ ***Can be used in flashing/dimming applications.**
- ◆ **Secondary Circuit Ground Fault Protection - (SCGFP)** Disables unit upon detection of arcs to ground in compliance with **UL2161** and **NEC** requirements.
- ◆ **Easy Wiring Methods** - Virtual Ground and Series Wiring Methods
- ◆ **User Friendly** - Adapts to most grounding situations.
- ◆ **Easy to carry handle.**
- ◆ **On/Off Toggle Switch.**


*UL does not have listing requirements for transformers that are remotely dimmed or flashed.

www.franceformer.com

P5KA2NG-2E Series

NORMAL POWER FACTOR

Catalog Number	VAC	Hz	Secondary		Primary V.A.	Input Amp.	Wt. Lbs.	Case Dimensions					
			Volts	mA				L	W	H	A	B	C
15030 P5KA2NG-2E	120	60	15000	30	435	3.60	25	13.35	4.50	7.42	10.87	12.21	3.0
12030 P5KA2NG-2E	120	60	12000	30	380	3.15	23	13.35	4.50	7.42	10.87	12.21	3.0
10530 P5KA2NG-2E	120	60	10530	30	310	2.55	23	13.35	4.50	7.42	10.87	12.21	3.0
9030 P5KA2NG-2E	120	60	9000	30	285	2.35	19	13.35	4.50	7.42	10.87	12.21	3.0
7530 P5KA2NG-2E	120	60	7500	30	250	2.10	17	13.35	4.00	6.13	10.87	12.21	3.0
6030 P5KA2NG-2E	120	60	6000	30	200	1.65	16	13.35	4.00	6.13	10.87	12.21	3.0
5030 P5KA2NG-2E	120	60	5000	30	170	1.40	16	13.35	4.00	6.13	10.87	12.21	3.0
4030 P5KA2NG-2E	120	60	4000	30	140	1.15	15	13.35	4.00	6.13	10.87	12.21	3.0
15060 P5KA2NG-2E	120	60	15000	60	900	7.50	30	14.85	5.50	8.47	12.37	13.71	3.0
12060 P5KA2NG-2E	120	60	12000	60	720	6.00	29	14.85	5.50	8.47	12.37	13.71	3.0
9060 P5KA2NG-2E	120	60	9000	60	565	4.70	27	13.35	4.50	7.42	10.87	12.21	3.0
7560 P5KA2NG-2E	120	60	7500	60	460	3.85	25	13.35	4.50	7.42	10.87	12.21	3.0
15030 P5KA2NG-2E	277	60	15000	30	425	1.55	25	13.35	4.50	7.42	10.87	12.21	3.0
12030 P5KA2NG-2E	277	60	12000	30	385	1.40	23	13.35	4.50	7.42	10.87	12.21	3.0
10530 P5KA2NG-2E	277	60	10530	30	310	1.15	23	13.35	4.50	7.42	10.87	12.21	3.0
9030 P5KA2NG-2E	277	60	9000	30	275	1.00	19	13.35	4.50	7.42	10.87	12.21	3.0
7530 P5KA2NG-2E	277	60	7500	30	235	.85	17	13.35	4.00	6.13	10.87	12.21	3.0
6030 P5KA2NG-2E	277	60	6000	30	190	.70	16	13.35	4.00	6.13	10.87	12.21	3.0
5030 P5KA2NG-2E	277	60	5000	30	160	.60	16	13.35	4.00	6.13	10.87	12.21	3.0
4030 P5KA2NG-2E	277	60	4000	30	130	.50	15	13.35	4.00	6.13	10.87	12.21	3.0

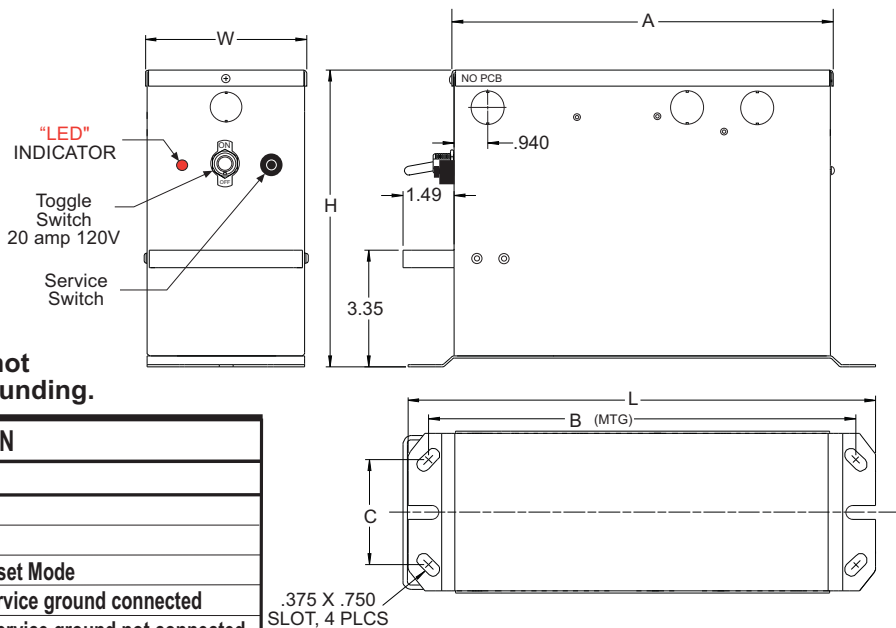

Service Switch does not operate without proper grounding.

DIAGNOSTIC LED OPERATION

LED Fault Code	Indicates
Steady ON	Operating normally
Continuous Flashing	In Service Mode
1 - Flash	15 second Diagnostic & Auto Reset Mode
2 - Flash	Secondary Ground Fault with service ground connected
3 - Flash	Secondary Ground Fault when service ground not connected
4 - Flash	Input Voltage exceeds 120% of rated
5 - Flash	Line & Neutral reversed on input connections

FRANCE