




RCN-2S32-SC

Brand Name	CENTIUM UL TYPE CC
Ballast Type	Electronic
Starting Method	Programmed Start
Lamp Connection	Series
Input Voltage	120
Input Frequency	60 HZ
Status	Active

Electrical Specifications

Lamp Type	Num. of Lamps	Rated Lamp Watts	Min. Start Temp (°F/C)	Input Current (Amps)	Input Power (ANSI Watts)	Ballast Factor	MAX THD %	Power Factor	MAX Lamp Current Crest Factor	B.E.F.
* F17T8	2	17	32/00	0.33	39	1.00	10	0.99	1.7	2.56
F25T8	2	25	32/00	0.45	53	0.95	10	0.99	1.7	1.79
F32T8	2	32	32/00	0.53	63	0.88	10	0.99	1.7	1.40

Wiring Diagram

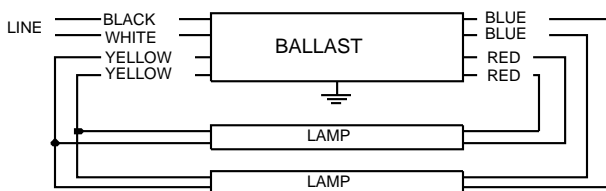


Diag. 21

The wiring diagram that appears above is for the lamp type denoted by the asterisk (*)

Standard Lead Length (inches)

	in.	cm.		in.	cm.
Black	22L	55.9	Yellow/Blue		0
White	22L	55.9	Blue/White		0
Blue	26R	66	Brown		0
Red	26R	66	Orange		0
Yellow	36L	91.4	Orange/Black		0
Gray	0		Black/White		0
Violet		0	Red/White		0

Enclos

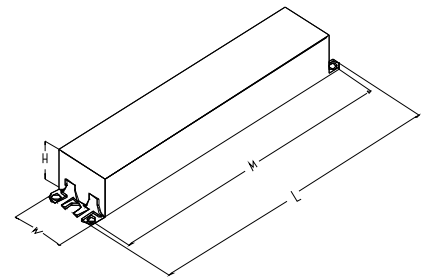

Enclosure Dimensions

OverAll (L)	Width (W)	Height (H)	Mounting (M)
9.50 "	1.7 "	1.18 "	8.90 "
9 1/2	1 7/10	1 9/50	8 9/10
24.1 cm	4.3 cm	3 cm	22.6 cm

Revised 11/26/2002



Data is based upon tests performed by Advance Transformer in a controlled environment and representative of relative performance. Actual performance can vary depending on operating conditions. Specifications are subject to change without notice. All specifications are nominal unless otherwise noted.

ADVANCE TRANSFORMER CO.

O'HARE INTERNATIONAL CENTER · 10275 WEST HIGGINS ROAD · ROSEMONT, IL 60018

Customer Support/Technical Service: Phone: 800-372-3331 · Fax: 630-307-3071

Corporate Offices: Phone: 800-322-2086